Airbag Systems

From June 2001

Deviate relay location and fuseplacements as well as the locations of multiple connectors see section "component locations".

Relay location on the thirteen position auxiliary relay panel, above relay panel:

Relay panel:

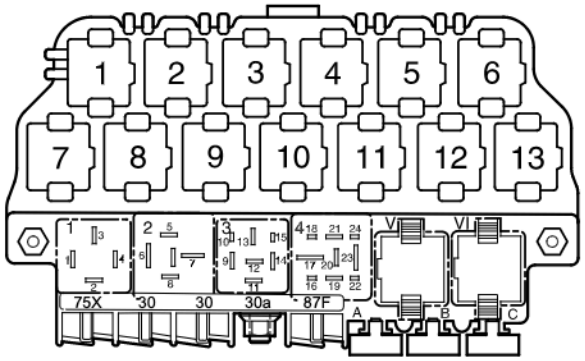

3B–20676

Relay location on the eight position auxiliary relay panel, behind relay panel:

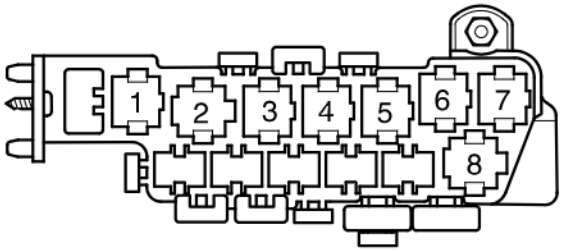

3B–20515

Note:

- *Number in parentheses indicates production control number stamped on relay housing.*

Fuse colors

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.

30 A - green
25 A - white
20 A - yellow
15 A - blue
10 A - red
7,5 A - brown
5 A - beige

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.

Airbag Control Module, Igniter for side airbag, Crash sensor for side airbag

D	Ignition/Starter Switch
G179	Crash sensor for side airbag, driver's side
G180	Crash sensor for side airbag, passenger side
J234	Airbag Control Module
N199	Igniter for side airbag, driver's side
N200	Igniter for side airbag, passenger side
T2e	Double Connector, on Crash sensor for side airbag, driver`s side
T2f	Double Connector, on Crash sensor for side airbag, passenger side
T3u	3-Pin Connector, yellow, below driver's seat
T3v	3-Pin Connector, yellow, below passenger's seat
T10p	10-Pin Connector, yellow, connector station A-pillar, right
T75	75-Pin Connector, on Airbag Control Module
A2	plus connection (15), in instrument panel wiring harness
109	Ground connection, in airbag wiring harness

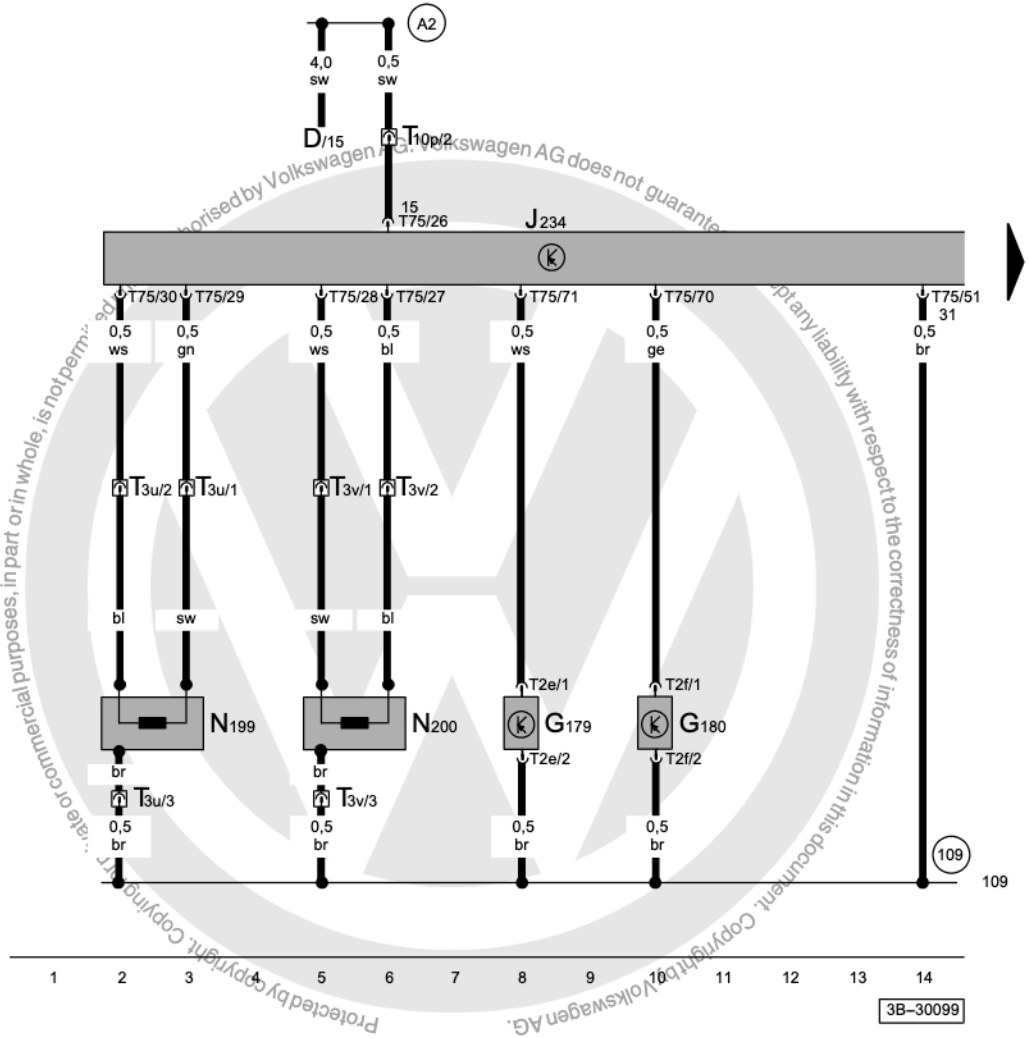

ws	=	white
sw	=	black
ro	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink

Protected by copyright. Copyright by Volkswagen AG. Volkswagen AG does not guarantee or commercial purposes, in part or in whole, is not permitted without the consent of Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document.

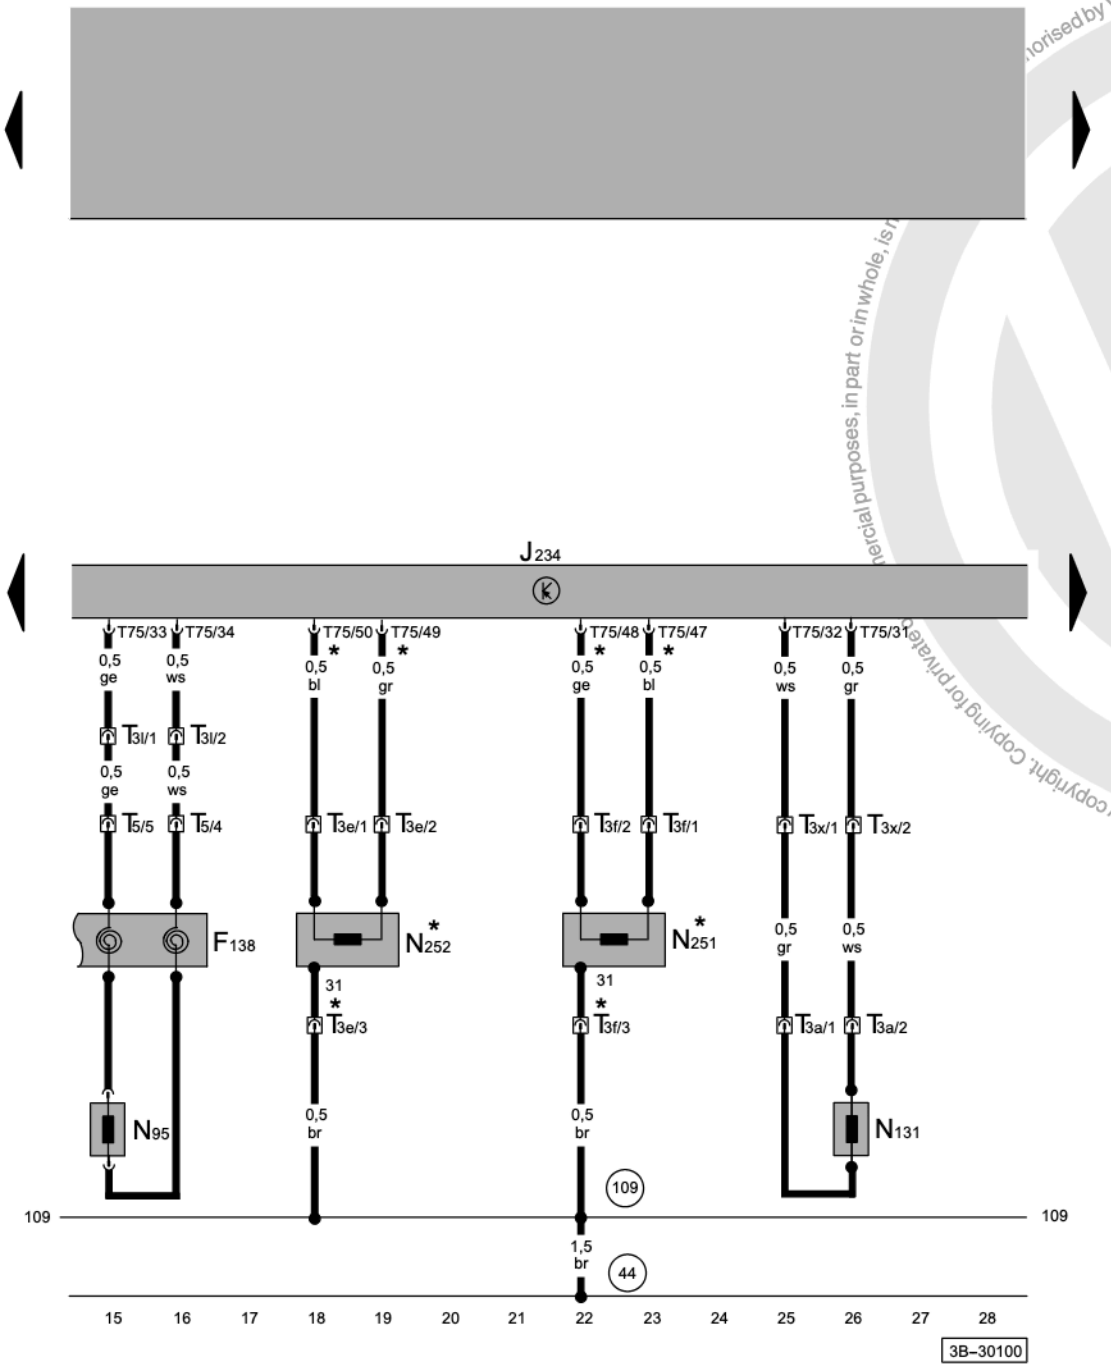

Airbag Control Module, Driver's Side Airbag, Igniter for head airbag, Front Passenger's Side Airbag Igniter

F138	Airbag Spiral Spring/Return Spring With Slip Ring
J234	Airbag Control Module, behind console
N95	Driver's Side Airbag Igniter
N131	Passenger's Side Airbag Igniter 1
N251	Igniter for head airbag, rear, driver side
N252	Front Passenger Head Airbag Igniter
T3a	3-Pin Connector, behind instrument panel, right
T3e	3-Pin Connector
T3f	3-Pin Connector
T3l	3-Pin Connector, yellow, connector station A-pillar, left
T3x	3-Pin Connector, yellow, connector station A-pillar, right
T5	5-Pin Connector, yellow, behind steering column switch cover
T75	75-Pin Connector, on Airbag Control Module
44	Ground connection, on left A-pillar, lower part
109	Ground connection, in airbag wiring harness
*	vehicles with head airbag only

ws	=	white
sw	=	black
ro	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.

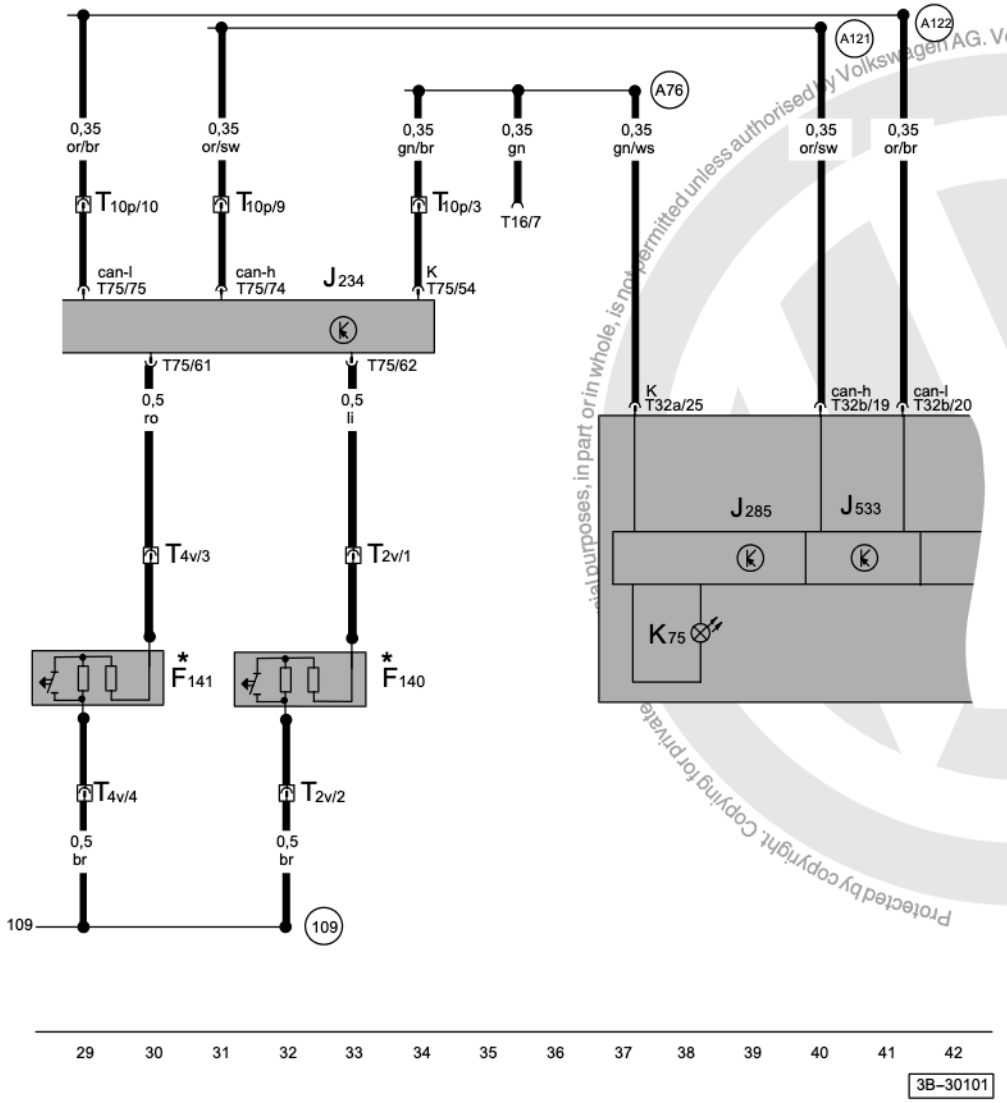

Airbag Control Module, Control module with indicator unit in instrument panel insert, Data Link Connector (DLC) , Front seat belt microswitches

F140	Left Front Seat Belt Microswitch*
F141	Right Front Seat Belt Microswitch*
J234	Airbag Control Module, behind console
J285	Control module with indicator unit in instrument panel insert
J533	Data Bus On Board Diagnostic Interface
K75	Airbag Malfunction Indicator Lamp (MIL)
T2v	Double Connector
T4v	4-Pin Connector
T10p	10-Pin Connector, yellow, connector station A-pillar, right
T16	16-Pin Connector, Data Link Connector (DLC) below instrument panel, left
T32a	32-Pin Connector, blue, on instrument cluster
T32b	32-Pin Connector, green, on instrument cluster
T75	75-Pin Connector, on Airbag Control Module
109	Ground connection, in airbag wiring harness
A76	Connector (K-diagnosis wire) in instrument panel wiring harness
A121	Connection (high bus) in instrument panel wiring harness
A122	Connection (low bus) in instrument panel wiring harness
*	Scan Tool display text for these component codes may be different than indicated

ws	=	white
sw	=	black
ro	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink

Protected by copyright. Copying for private and commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.